



Innovating the art of listening

Phone: 1-201-443-4626

Email: [customerservice@hifiman.com](mailto:customerservice@hifiman.com)

Address: 143 Rickey Blvd, Bear, DE, 19701 US

Web: [hifiman.com](http://hifiman.com)



# HM-700 Owner's Guide



# Welcome

Thank you for purchasing the HiFiMAN HM-700 portable music player. This Owner's Guide is intended to provide a useful overview of your new player.

# Contents

## 1. Overview

Function Buttons . . . . .	04
Details . . . . .	05
Features and Specs . . . . .	06
Accessories . . . . .	06
Basics . . . . .	07
Connecting Your HM-700 . . . . .	08

 
## 2. Operations

Main Menu . . . . .	09
File Browser . . . . .	11
Music . . . . .	12
Settings . . . . .	15

## 3. Other Information

Safety Caution . . . . .	16
Recycling Information . . . . .	17

## Function Buttons

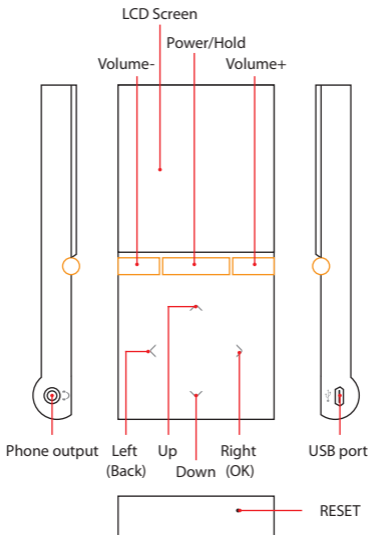

## Details

### Power

Press the power button for 2-3 sec to turn on the player. Press the button 2-3 sec to turn off the player when the HM-700 is powered on. When the player is powered on, by pressing the button once, the buttons can be locked. Press again to unlock.



Up/Previous/Fast Rewind



Down/Next/Fast Forward



Back to the previous folder



Go to selected file/folder

Screen

2"LCD screen

Volume

Press "+" or "-" button to adjust the volume

USB Port

For Data exchange and charging via USB cable

Phone Out

3.5mm TRRS balanced headphone output

RESET Hole

Note: Performing Reset will clear the player's memory and put it back to the original factory default state.

## Features

- Supports lossless music up to 16Bit
- Compact and light weight

## Specifications

Frequency response: 20Hz-20KHz

S/N: 91 dB

Max output: 50mW(1.35V @36 Ohm)

Dimensions: 49mm x105mm x12mm  
(1.9X4.1X0.5 Inch) WXHxD

Weight: 82g (2.9 Oz)

On-board flash memory: 32GB

Battery life: 15 hours

Acceptable music formats: WAV, MP3, APE, FLAC(16Bit)  
WAV(24Bit,44.1/48KHz)

## Accessories

USB cable\*1

Owner's Guide\*1

RE-400/RE-600 Earphone\*1



## Basics

### Power ON/OFF

Press the Power Button to turn the player on/off.  
You can also set the sleep time.

 
### Charge

The battery life is approximately 15 hours. When the player shows "low battery", please use the supplied USB cable for charging. When the player is charged, the charging mark will be shown on the screen.

Note: If there is any background hiss with the player, please increase the volume to above 5 and turn off it to solve this problem; turning off the player at the volume of above 5 can help avoid this happening.

## Connecting the HM-700

### Connecting Your HM-700

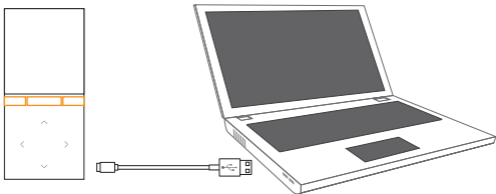

- 1 Use the supplied USB cable to connect HM-700 to your computer.
- 2 Copy the file or folder to your player by dragging and dropping.
- 3 Click the right of the mouse and select "Delete" to delete the selected file.


\*It is important to not remove the USB cable while music is being downloaded or the music files could be corrupted. The speed for data transfer can vary depending on the size of the transferred files and/or the operating system of your computer

## Main menu
 
### Starting interface




When the player is starting, the system will automatically go to main menu.

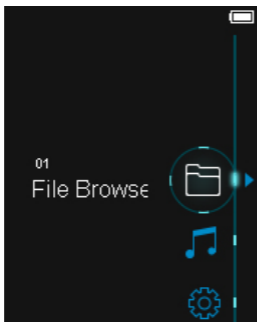

Press the up, down and right button to select.

## File Browser

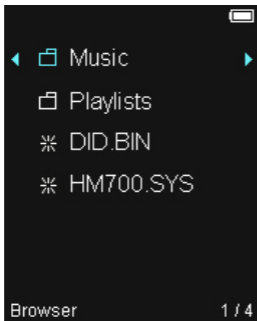 


On the main menu, select “file browser” and press the right button, you can see the file list.

### Delete a file

 
Select the file you want to delete, press the right button for a few seconds and a window will show up. Press the up and down button to select “Yes” or “No”. Then press the right button to confirm.

## Music

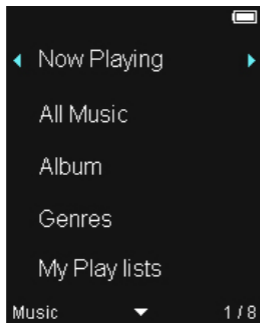

After the player goes to main menu, select Music to enter the list.

## Playing menu

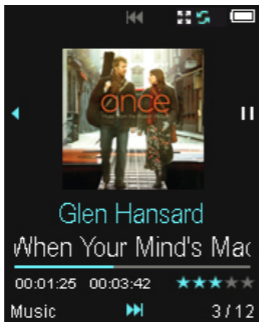 

When the HM-700 is playing music, press the right button for 2-3 seconds to show options. Press the up and down buttons to make your selection.

AB Repeat: select AB Repeat, press the right button to select "A" and press the button again to select "B".

Then the player will play "AB" part repeatedly.

Play mode: to select Normal, repeat or shuffle.


Study mode: on playing menu, select the time of skip period.

- Add Bookmark
- Select EQ: Normal, Rock, Pop, Classic, Jazz, Electronic, Full Bass.
- Setup EQ: custom EQ or fade-in.
- Rate: rate your songs on the player.
- Scan speed:
- Lyric display: to turn on/off the lyrics.
- Repeat times
- Repeat interval: set the AB interval.
- Delete file: delete the selected file.
- Information: show the info of your selected song, including the Bitrates, sampling rate, album, artist, etc.



## Setting

 After the player goes to main menu, select Settings to set.

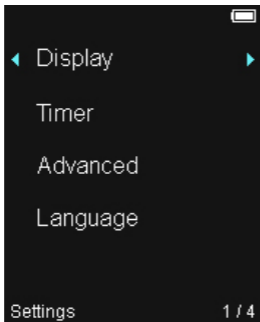

- Display: You can set the backlight and brightness.
- Timer: set the time for auto power off or sleep.
- Advanced: go to rebuild DB, format device, system information and reset all settings.
- Language: make your language selection

## Product safety

- Keep the player away from rain, water, drinks, chemicals and cosmetics, etc. Or the player can be damaged.
- Avoid putting the player in a humid, dusty or smoky environment.
- Proper operating environment: 21F –104F (-6 °C ~ 40 °C) in a non-tropical climate.
- Do not use chemicals or detergents to clean the player.
- It is not recommended to use headphones while riding, driving or operating motor vehicles.
- If you experience ringing in your ears, please reduce the volume or turn off the player.
- It is not allowed to disassemble, repair or modify the player.

## Disposal and Recycling

The HM-700 contains electronic parts and a Lithium-Ion battery. Please dispose the player in a reasonable way when it reaches its end of life. Separate collection and recycling will help conserve and protect the environment.

